

# FR400- LD

## Fouling Resistant RO Membrane Elements - FR Series

### Product Presentation

FR Series RO Membrane Element utilizes specialized manufacture technique that can improve the hydrophilicity, electric charge and roughness of its surface, thus reducing the breeding and adsorption of pollutants and microbes on membrane surface.

### Application

Pure water production from surface water, for example: lake water, river water, etc.

Desalination of Reclaimed water, for example: Reclaimed water, industrial wastewater, RO concentrated water, etc.

### Product Performance

Model	Stable Rejection Rate(%)	Permeate Flow GPD(m <sup>3</sup> /d)	Active Membrane Area ft <sup>2</sup> (m <sup>2</sup> )	Feed Spacer Thickness mil
FR400-LD	99.6	10500(39.7)	400(37.2)	34

- 1、 Operating pressure 225 psi (1.55 MPa) 2000 mg/L NaCl solution Temperature at 25 pH 7.0 ± 0.5 Recovery rate at 15%
- 2、 Each membrane element may have ±15%variation of permeate flow.
- 3、 Minimum Rejection Rate 99.5%


### Operating Conditions & Limits

Maximum operating pressure psi(MPa)	600(4.14)
Maximum feedwater temperature	45
Maximum inlet flow rate m3/h	17
Maximum concentration of free chlorine mg/L	0.1
Maximum pressure drop per element psi(MPa)	15(0.1)
Allowed pH range for feedwater in operation	2- 11
Allowed pH range for chemical cleaning	1- 13
Maximum feedwater flow SDI15	5

### Important information

- Before the membrane element leaves the factory, The dry membrane element has no preservation solution, The wet membrane element has 1.0%sodium bisulfite (in winter, add 10% of propylene glycol antifreeze) as the preservation solution for storage treatment and use vacuum packaging.
- Dry membrane elements should always be maintained wet after Soaking; when wet membrane elements are not used for a long time, preservation solution is needed to soak the elements.
- When the membrane element is used for the first time, it is recommended to flush it first for 15- 25 minutes at low pressure (not suitable for soaking or soaking overnight), and then flush it for 60- 90 minutes at high pressure (the water flow should not be less than 50%of the system design water flow).
- The permeate water and concentrated water within the first hour of the initial operation of the membrane element should all be discharged.
- The operating limits and operational guidelines given in this technical information are part of the limitations of the three- year warranty on the membrane element.
- The addition of any chemicals that may affect the membrane element during storage and operation is prohibited, and Vontron Technology will not be liable for any consequences arising from the use of such chemicals.
- Please refer to the Product Manual for details on installation, commissioning, storage, and transportation of membrane elements.

### Dimensions and Packaging

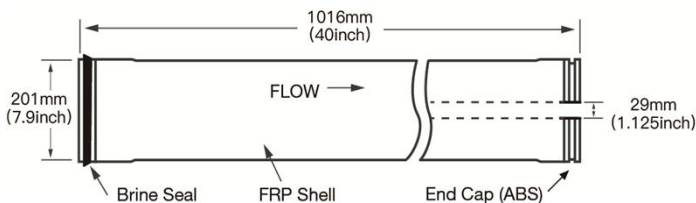

Packing carton:(L:W:H)  
1080x216x232mm

Connector material number:  
3.02.09.0006



Product performance may vary under different conditions, and the information in this document is for reference only and is not to be relied upon as a guarantee of performance in actual applications. It is the responsibility of the user to determine whether the products and information in this document are suitable for the settings in which they are used and to ensure that the products are used in a manner consistent with applicable laws and regulations. Vontron assumes no obligation or responsibility for the information in this document and is not responsible for any consequences arising from the use and maintenance of the products by the user not in accordance with the conditions provided in this sample. Due to technical progress and product replacement, product information may change at any time without prior notice. Please pay attention to the latest product information.