


VUF8040-6K/31F Membrane Element

Brief Introduction

The VUF series is mainly used for separation and concentration of specific material with molecular weight cut off (MWCO) at 4k, 6k, 8k, 10k, 20k, 67k Da. VUF series applies the feed channel spacer of 31, 46 and 90mil, and is favorably equipped with the fiberglass housing or sanitary-grade housing.

Model		Active Membrane Area ft ² (m ²)	Permeate Flo	8	
VUF8040-6K/31F		400 (37.2)	6500 (24.6)	PEG6000	
Testing Conditions	Operating pressure 60 psi (0.41Mpa) Temperature at 25 °C Tested in 1000 mg/L solution Recovery rate at 15%				
	Maximum operating pressure			300psi (2.07Mpa)	
	Maximu	m feedwater flow		$84gpm (19 m^3/h)$	
Operation	Maximu	m feedwater temperature		40°C	
	Maximu	ım feedwater flow SDI ₁₅		5	
Limits &	Allowed pH range for feedwater in operation			3~10	
Conditions	Allowed	pH range for chemical cleaning		2~12	
	Maximu	m concentration of free chlorine		<0.1ppm	
	Maximu	m pressure drop per element		15psi (0.1Mpa)	

Size of Membrane Element: 1.0 inch = 25.4 mm

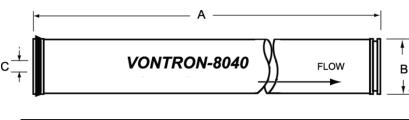

A/mm(inch)	B/mm(inch)	C/mm(inch)
1016 (40)	201 (7.9)	29 (1.125)

Notice:

1. All data and information provided in this manual have been obtained from long-term experiment by Vontron. We confirm the effective and accuracy of the data. Vontron assumes no liability for any aftermath caused by user's failure in abiding by the conditions specified in this manual in use or maintenance of membrane products. It is strongly recommended that the user shall strictly abide the designed use and maintenance requirements and keep relevant records.

- 2. The permeate value listed in the table is the average value. The permeate flow of single membrane element is tolerance not exceeding $\pm 20\%$ of the nominal value.
- 3. All wet-type membrane elements have been strictly tested before leaving the factory, and have been treated with 1.0% sodium hydrogen sulfite (10% glycerin antifreeze required in winter) for storage purpose, then sealed with plastic bag in vacuum, and further packed in carton boxes.
- 4. The membrane used should remain wet after being used; In long term suspension, to prevent the breeding of microbes, soak the membrane elements with protective solution is highly recommended, the solution (prepared with RO filtered water) containing 1.0% sodium hydrogen sulfite (foodstuff-purpose).
- 5. Operate low pressure flushing for 15-25 minutes of first use, high pressure flushing for 60-90 minutes when first use (Permeate volume no less than 50% of designed volume). Discard all the permeate and condensed water produced during the first one hour after system start-up.
- 6. During storage time and operation period, it is strictly prohibited to added any chemical medicament that may be harmful to membrane elements. In case of any violation in adding chemical medicament, Vontron assumes no liability for any damages incurred.
- 7. Along with technical development and product renovation, all information will be subject to modification without prior notification. Please keep notice the website of Vontron for any updates of the product.